




# Coffee Moisture Meter

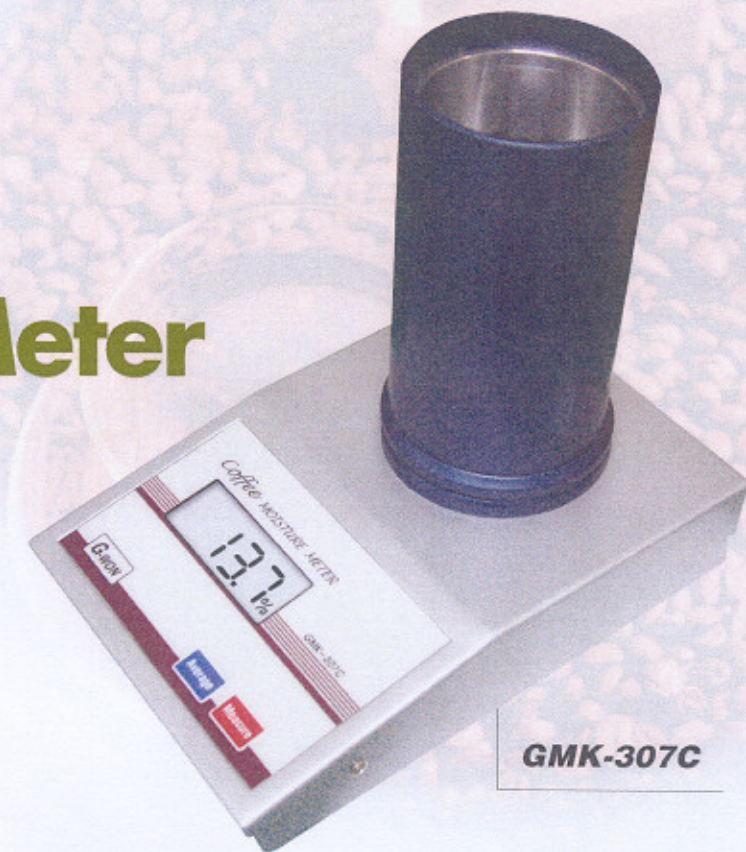

**GMK-307C**

## FEATURES

1. Useful for measuring the moisture content of coffee beans.
2. Easy to use, quick to read and portable.
3. Capacitance method adopted.
4. Microprocessor control.
5. Average data (up to 9 times) available
6. Low battery sign appears


## SPECIFICATIONS

SPECIFICATIONS	GMK-307C
1. Measuring Ranges	4.0% ~ 15.0%
2. Accuracy	±0.5%
3. Resolution	0.1%
4. Power Source	1.5V Battery x 4EA
5. Display	Large Digital LCD
6. Temperature Compensation	Automatic
7. Dimensions	Body - 220(L) x 148(W) x 60(H) mm / Sample Barrel - 145(H) x 80(DIA) mm
8. Gross Weight	Approx. 1.68Kg
9. Sample Weight	Approx. 250cc

**G-WON HITECH CO., LTD.**

# COFFEE MOISTURE METER (GMK-307C)

## 1. The Names of Each Part

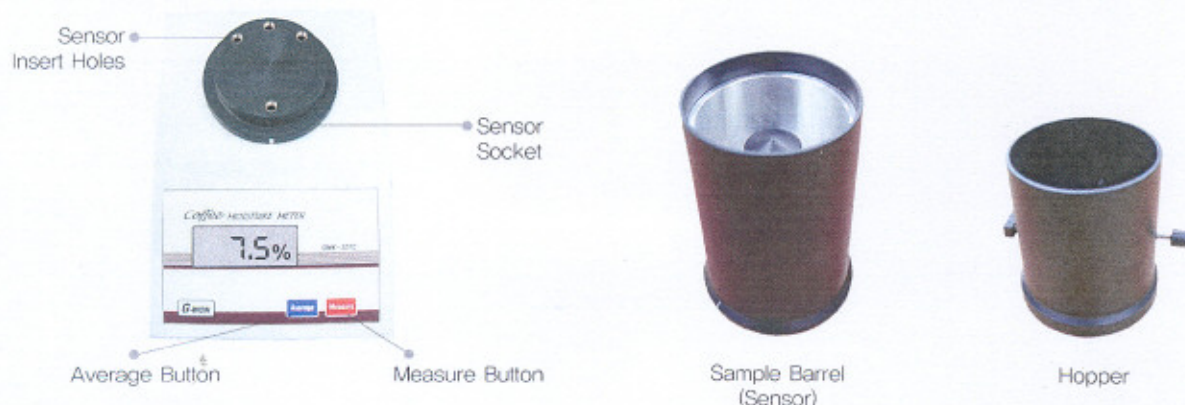

## 2. Measurement

- Place 4 pieces of 1.5V battery into the battery compartment in the bottom of the instrument, and turn on '1/0' switch on the backside.
- Connect 'Sample Barrel (Sensor)' to 'Sensor Socket' carefully.
- Fix 'Hopper' into 'Sample Barrel (Sensor)'.
- Fill 'Hopper' fully with the test samples by using 'Sample Cup'.
- Press the side button of 'Hopper', and the test samples fall down into 'Sample Barrel (Sensor)'.
- Press 'MEAS.' button, and the test result appears on LCD within about 3 seconds.



## 3. Average Data

- When you want to get average data, please press 'Average' button after measurement.
- Average data are available up to 9 times of measurement.

## 4. Power

- Turn off 1/0 switch on the backside when there is no use.
- When [E → P] displays, please change batteries.

## 5. Battery



In case of no use for a while, please remove batteries.

## 6. Keeping

- Keep the instrument in a cool place.
- Clean the instrument after measurement.

## 7. Warranty

- The manufacturer grants 12 months of warranty since the date of purchase.
- In case of wrong use, abuse or misuse, warranty is not granted.