

NEW FLOUR MOISTURE METER

MODEL : GMK-308



SPECIFICATIONS

| | |
|--------------------|---------------------------|
| Model | GMK-308 |
| Application | Flour |
| Temp. Compensation | Automatic |
| Measuring Range | 8.5% ~ 23.5% |
| Power Source | Battery 1.5V X 4EA |
| Accuracy | ±0.5% |
| Dimensions | 164(L) X 94(W) X 60(H) mm |
| Weight | Approx. 1.5kg |

FEATURES

- Easy to Use, Compact and Quick Reading
- Electrical Resistance Method
- Test Cell Insert Type
- Non-Destructive Testing
- Average Data Available
- Battery Replacement Sign Appears
- CE Mark obtained

STANDARD ACCESSORIES


- Carrying Case 1 EA
- Test Cell 1 EA
- Cleaning Brush 1 EA
- Spoon 1 EA
- User's Manual 1 EA
- Battery 1.5V 4 EA



G-WON HITECH CO., LTD.

FLOUR MOISTURE METER

MODEL GMK-308

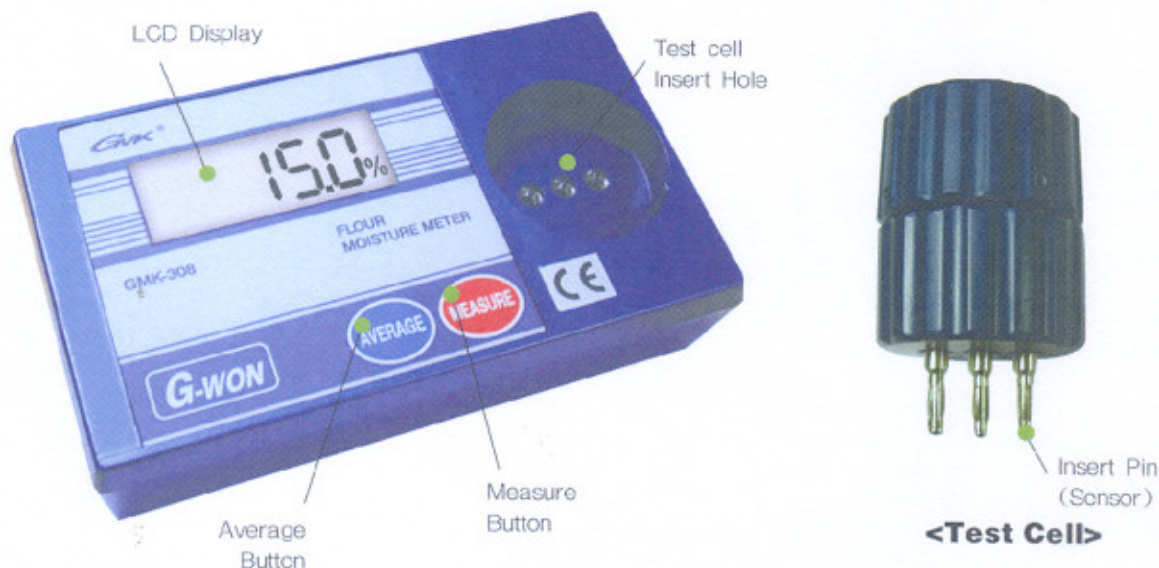

■ BEFORE MEASUREMENT

- 1) Open the cap of 'Test Cell' and make sure that it is clean and empty.
※ Do not touch insert pin with hands.
- 2) With a spoon, fill the 'Test Cell' tightly with testing sample.
- 3) Close the cap of 'Test Cell' by turning it left.
- 4) Watching insert holes carefully, place the 'Test Cell' on the instrument.

■ MEASUREMENT

- 1) Press 'Measure Button', and measurement result appears on LCD soon.
- 2) Average data is available by pressing 'Average Button' (up to 9 times).
- 3) Power is off by pressing 'Average Button' twice.

■ IMPORTANT

- 1) Before every measurement, clean test cell with cleaning brush.
- 2) When the sample is out of measuring range, 'Err' sign appears.
- 3) Do not store the instrument at damp place.
- 4) In case of no use for a while, make sure to remove batteries.
- 5) The manufacturer grants a total replacement warranty of 12 months from the date of purchase.
- 6) Warranty will not be granted in case of wrong use, abuse or misuse.

G-WON HITECH CO., LTD.

WOOLIM E-BIZ. CENTER 310
#170-5, GURO-DONG, GURO-GU,
SEOUL, KOREA(152-769)
Tel : 82-2-2108-1646(DIR.)
Fax : 82-2-2108-1649
E-MAIL : g-won@g-won.co.kr.

Other Instruments

- | | |
|-------------------------|------------------------|
| ■ Digital Refractometer | ■ Grain Moisture Meter |
| ■ Wood Moisture Meter | ■ Digital Salt Meter |
| ■ Coffee Moisture Meter | ■ Thermo-Hygro Meter |
| ■ Tea Moisture Meter | ■ Citrus Acidity Meter |